



HDPHONE™

Serene HD-60J

*HD Amplified Telephone
with 55 dB amplification
and Jumbo keys*



- Easy to read jumbo keys with Braille
- Powerful amplifier—up to 55 dB louder
- Tone Control enables you to understand every word
- 3 one-touch and 10 two-touch speed dials
- Two bright visual ring flashers
- Loud ringer with adjustable ring volume and ring tone

Hear More, Understand Better

Just plug and play. This phone comes with these settings: amplifier comes on automatically when you lift the handset, high ringer volume and tone, tone dialing.



HDPHONE™

Serene HD-60J

*HD Amplified Telephone
with 55 dB amplification
and Jumbo keys*



- Easy to read jumbo keys with Braille
- Powerful amplifier—up to 55 dB louder
- Tone Control enables you to understand every word
- 3 one-touch and 10 two-touch speed dials
- Two bright visual ring flashers
- Loud ringer with adjustable ring volume and ring tone

Hear More, Understand Better

Just plug and play. This phone comes with these settings: amplifier comes on automatically when you lift the handset, high ringer volume and tone, tone dialing.

It's as easy as ***1,2,3***

1. To program a number for one-touch speed dialing (M1-M3)

1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
2. Enter the phone number on the dial pad
3. Press MEMORY and then press the memory button (M1-M3) where you wanted to store this number
4. Return the handset to its cradle. If you made a mistake or want to program

2. To program a number for two-touch speed dialing

1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
2. Enter the phone number on the dial pad
3. Press PROG and then press the key-pad button (1 thru 0) where you wanted to store this number
4. Return the handset to its cradle. If you made a mistake or want to program a new number into the same memory button, repeat the above steps

3. To speed dial by one-touch---lift the handset and press the desired memory button (M1-M3)

4. To speed dial by two-touch---lift the handset, press MEMORY and then press the key-pad button (1-0) where the desired number is stored

5. To adjust Volume (the amplifier must be On)—slide the VOL switch to suit

6. To adjust Tone (the amplifier must be On)---slide the TONE switch until you hear and understand the best

It's as easy as ***1,2,3***

1. To program a number for one-touch speed dialing (M1-M3)

1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
2. Enter the phone number on the dial pad
3. Press MEMORY and then press the memory button (M1-M3) where you wanted to store this number
4. Return the handset to its cradle. If you made a mistake or want to program

2. To program a number for two-touch speed dialing

1. Lift the handset and press PROG (ignore any dial tone or busy tone in your handset)
2. Enter the phone number on the dial pad
3. Press PROG and then press the key-pad button (1 thru 0) where you wanted to store this number
4. Return the handset to its cradle. If you made a mistake or want to program a new number into the same memory button, repeat the above steps

3. To speed dial by one-touch---lift the handset and press the desired memory button (M1-M3)

4. To speed dial by two-touch---lift the handset, press MEMORY and then press the key-pad button (1-0) where the desired number is stored

5. To adjust Volume (the amplifier must be On)—slide the VOL switch to suit

6. To adjust Tone (the amplifier must be On)---slide the TONE switch until you hear and understand the best